

/

-
-
-
-



:

- Astra Linux Special Edition .10265-01 (8.1)
- Astra Linux Special Edition .10015-16 . 2

1. ;
- 2.

```
set password enable
```

3. , , (), ().
set .



Password successfully enabled

1. ;
- 2.

```
set password disable
```

3. .



Password successfully disabled

1. ;
2. :

```
set password change
```

3. .



Password successfully changed

1. ;
 2. set password mode <1 | 0> - :
- 0 - .
 - 1 - .

▪

1. ;
 2. get password status - :
- ;
 - .

:



```
# set password mode 1
# get password status
Status : Disabled
Check mode: Load and Modify

# set password mode 0
# get password status
Status : Disabled
Check mode: Modify
```