

AMD (AMDGPU)

-
- [AMD](#).



:

- Astra Linux Special Edition .10265-01 (8.1)
- Astra Linux Special Edition .10015-16 . 2



AMD, : "sclkr=no iommu=0" . : /boot/boot.conf.

•

1. /boot/boot.conf, :

```
sudo nano /boot/boot.conf
```

, "cmdline=", "sclkr=no iommu=0", :

```
cmdline=console=tty0 consoleblank=0 hardreset root=UUID=619dc2de-2207-468f-a4bc-1022ec7b96a6 net.
ifnames=0 ipv6.disable=1 parsec.max_ilev=0
```

:

```
cmdline=sclkr=no iommu=0 console=tty0 consoleblank=0 hardreset root=UUID=619dc2de-2207-468f-a4bc-
1022ec7b96a6 net.ifnames=0 ipv6.disable=1 parsec.max_ilev=0
```

2. :



```
<ctrl>+<x>
<y>
<enter>
```

3. , , .

AMD.

1. , USB-FLASH ;
2. [boot.conf](#) , , "cmdline="

```
sclkr=no iommu=0
```

3. ;

4. :



```
<ctrl>+<x>
<y>
<enter>
```

5. ;

6. ;

7. (/dev/sda1);

8. , :



" "

9. ;

10. :



<alt>+<f2>

11. boot (/dev/sda1):

```
mount /dev/sda1 /mnt
```

12. boot.conf:

```
nano /mnt/boot.conf
```

13. , "cmdline=" :

```
sclkr=no iommu=0
```

;

14. :



<ctrl>+<x>

<y>

<enter>

15. :

```
umount /mnt
```

16. :



<alt>+<f1>

17. .